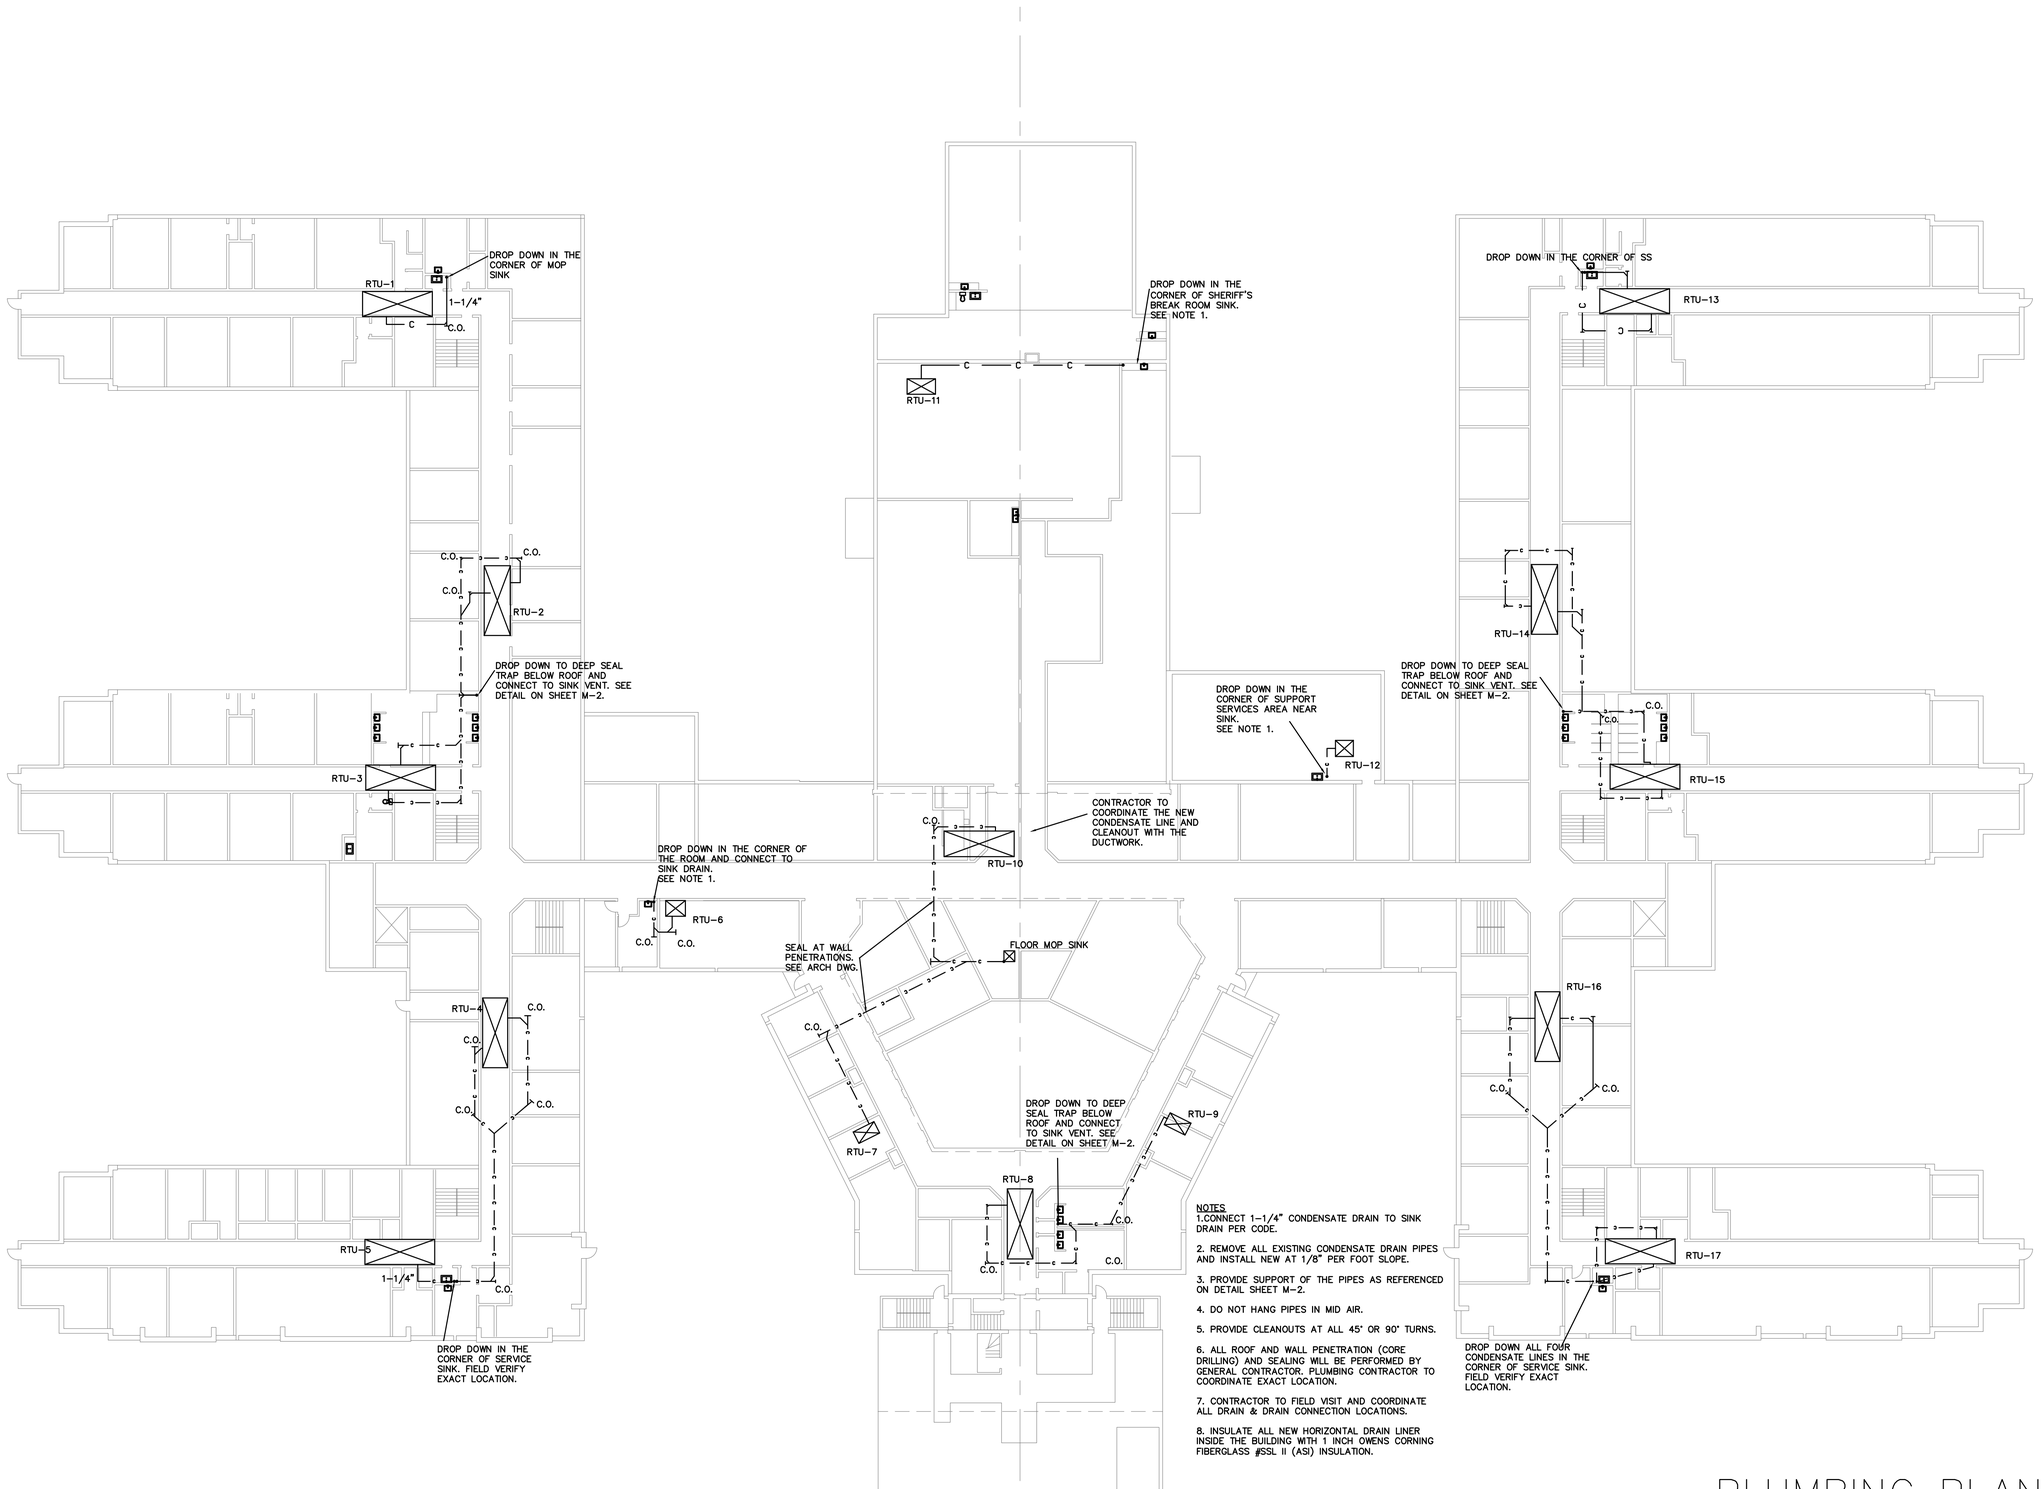


NOTES

1.CONNECT 1-1/4" CONDENSATE DRAIN TO SINK DRAIN PER CODE.

2. REMOVE ALL EXISTING CONDENSATE DRAIN PIPES AND INSTALL NEW AT 1/8" PER FOOT SLOPE.

3. PROVIDE SUPPORT OF THE PIPES AS REFERENCED ON DETAIL SHEET M-2.

4. DO NOT HANG PIPES IN MID AIR.

5. PROVIDE CLEANOUTS AT ALL 45° OR 90° TURNS.

6. ALL ROOF AND WALL PENETRATION (CORE DRILLING) AND SEALING WILL BE PERFORMED BY GENERAL CONTRACTOR. PLUMBING CONTRACTOR TO COORDINATE EXACT LOCATION.

7. CONTRACTOR TO FIELD VISIT AND COORDINATE ALL DRAIN & DRAIN CONNECTION LOCATIONS.

8. INSULATE ALL NEW HORIZONTAL DRAIN LINER INSIDE THE BUILDING WITH 1 INCH OWENS CORNING FIBERGLASS #SSL II (ASI) INSULATION.

# PLUMBING PLANS

SCALE: 1/20" = 1'-0"

revisions

| no. | date |
|---|---|
| | |

seal


**john pruett architects**
1869 madison ave.
memphis, tn 38104
(901) 721-9062

pruettarchitects@bellsouth.net
www.pruettarchitects.com


ROOF REPLACEMENT
**Peggy Edmiston Administration Building**
1075 Mullins Station Road, Memphis, TN 38134

**BID DOCUMENT SET**

sheet name

P-1

date

**11.18.2013**